


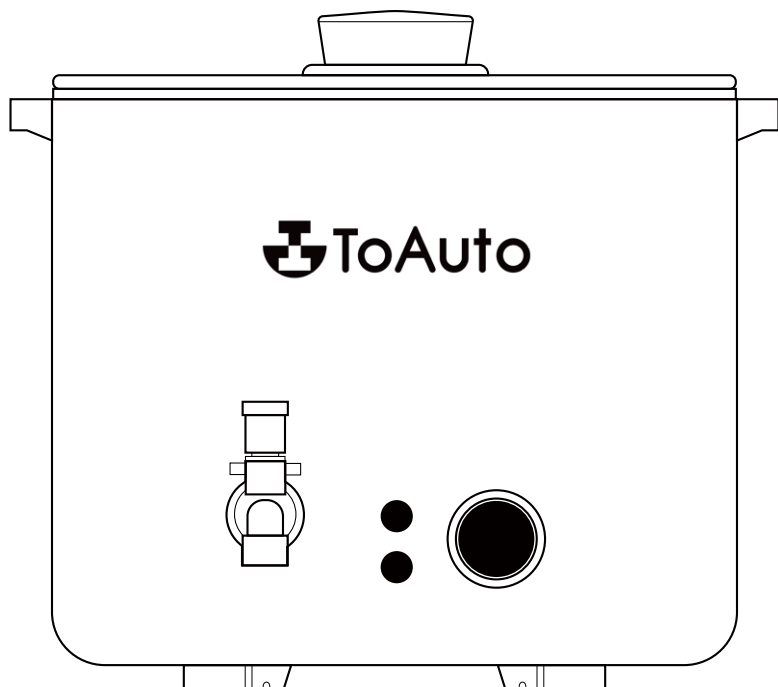

WAX MELTING FURNACE INSTRUCTION





EXCLUSIVE MEMBERSHIP



TECHNICAL SUPPORT & AFTER-SALES SERVICE



Technical Support

John.TechnicTeam@gmail.com

Customer Service

Service@FastToBuy.com

Service@ToAutoTool.com


CONTENTS

I. English (For US, UK, Canada, Australia)	2
1. SAFETY INSTRUCTIONS	2
2. APPEARANCE	3
3. PARAMETER	3
4. USER GUIDE	4
5. MAINTENANCE	9
6. FAQ	11
7. DISCLAIMER	12
 II. Deutschland (für Europa)	 15
1. SICHERHEITSHINWEISE	16
2. ERSCHEINUNG	17
3. PARAMETER	17
4. BENUTZERHANDBUCH	18
5. WARTUNG	23
6. FAQ	25
7. HAFTUNGSAUSSCHLUSS	26

1. SAFETY INSTRUCTIONS

1. This product is an electrical product, and safety precautions should be followed to avoid accidents.
2. In order to prevent electric shock accident, the machine must be connected to a correctly grounded socket, and the correct voltage must be selected to ensure correct grounding. It is not allowed to be exposed to rain or humid environment. When not in use, please disconnect the power supply. After the machine is completely cooled, it can be stored in a suitable place.
3. This device is not intended to be used by persons (including children) with physical, sensory, or mental impairments or lack of experience and knowledge, unless they are supervised and instructed by those responsible for their safety.
4. If the power cord or the machine is damaged, it must be replaced and repaired by the manufacturer or authorized service agent to avoid danger.
5. It is strictly forbidden to use this equipment in a humid and corrosive environment, and do not use this equipment in a combustible or explosive environment. After the machine is turned on, someone needs to take care of it to ensure safe operation.
6. When replacing product parts, please use original accessories.
7. This product complies with CE, FCC, ROHS and other certifications, and has applied for an industry patent, and counterfeiting must be investigated.

2. APPEARANCE

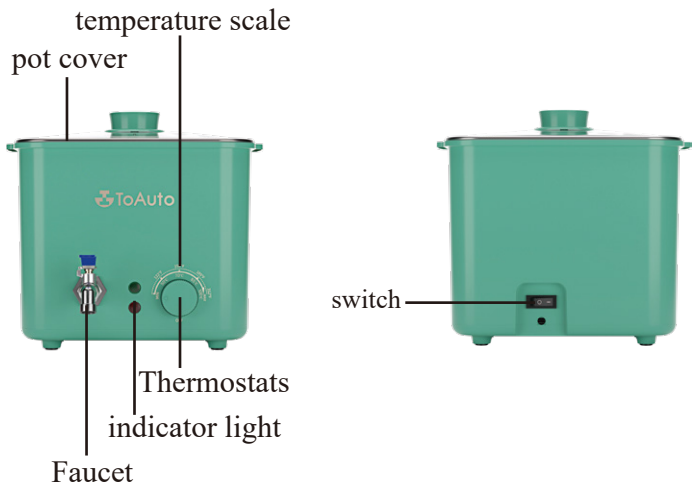

3. PARAMETER

Product name	Wax Melting Furnace
Input Voltage(V)	AC 120V , 60HZ or AC230V , 50HZ
Rated Power(W)	800W
Temperature range	50-100°C
Capacity	4L
Indicator light	Red light (machine in heating status); green light (machine in keeping warm status.)

4. USER GUIDE

4.1. Faucet installation

After placing the waterproof ring on the faucet pipe, align the pipe and tighten it clockwise. If necessary, use the matching wrench.



4.2. Safety reminder


- (1). This machine needs to be used indoors. Before use, it should be placed on a horizontal table. The distance between the machine and the wall should be more than 10cm.
- (2). Connect the power supply, the power socket must have a reliable grounding protection.
- (3). Put the wax beans into the machine before starting the machine to avoid dry burning of the machine; long time dry burning of the machine may burn out the heating tube.

4.3. Parameter settings

- (1). Turn on the power switch on the back of the machine, the indicator lights up, and the machine starts.




(2). After starting up, preset the temperature value through the knob.

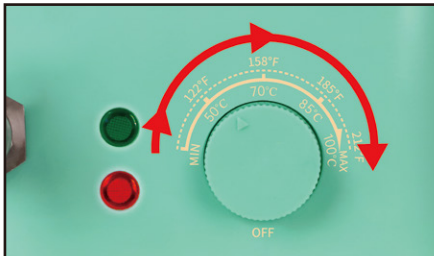


(3). Due to the influence of the weight of the added wax bean material and the ambient temperature, after the wax bean melts and stabilizes, the temperature difference between the real-time temperature and the set temperature is about $\pm 10^{\circ}\text{C}/50^{\circ}\text{F}$.

4.4. Steps to make candles

(1). Add wax beans, start the machine, set the temperature, and start melting the wax.

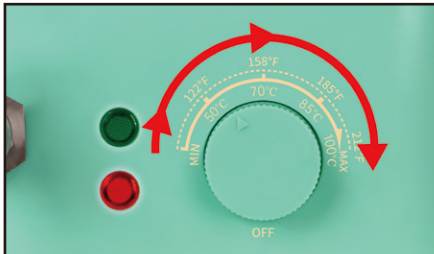

(2). During the heating process, it is recommended to stir the wax beans in the pot with a spoon every 3-4 minutes, to make the temperature in the pot more uniform and melt the wax faster.

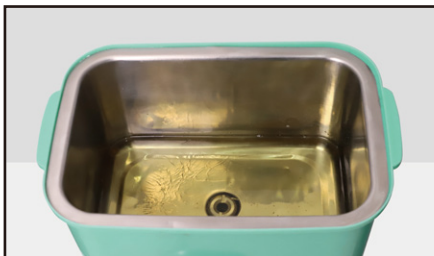

(3). After about 15 minutes, the wax beans are all melted; prepare the wax container, open the tap to fill the wax liquid.



(4). Prepare a mold with a wick, slowly pour the wax liquid into the mold, and let it stand for 24 hours (the resting time is affected by the environment, temperature and wax type, etc.).



4.5. Supplementary Note

(1). If you want to make candles more fragrant, you can try to add some aromatherapy or essential oils, such as lavender essential oil, rose essential oil, lemon essential oil, rosemary essential oil, etc., you will like it.



(2). If you need to make colored candles, you can add your favorite dyes or dried flowers, and remove the mold after 24 hours (note: since the wax is not completely dry, please do not use too much force when removing the mold.).



4.6. Cleaning machine

Melting the wax to make the candles is only part of the project. If you plan to make more candles or reuse the furnace, you must first remove the old wax. Sharp tools or abrasive scouring pads aren't really an option if you plan to keep your pans in good shape. Instead, pour off excess wax and wipe off the wax while it is still soft and warm for the next use.

(1). Prevent Wax Waste

Once you're done with your candle making project -- or any other wax craft -- there's a good chance you still have a lot of wax in the furnace. Leaving it in the pan to harden will make it harder to remove, which could be a problem if you want to use a different scent, color, or type of wax next time. Pour the remaining liquid wax into the paper cups and let them harden completely. To reuse the wax later, simply peel off the paper and place the wax block back in the furnace. If you want to discard the wax, pour it into a paper cup or an empty non-recyclable container such as a milk carton. Once the wax hardens, it can be discarded.

(2). Remove excess wax

Even after pouring off the remaining wax, there may still be a thin pool of wax on the bottom or inside of the furnace. Once the wax has cooled slightly but is still liquid, ball up a paper towel and use it to wipe the inside of the pan, replacing the paper towel when it becomes saturated with wax. Wear thick leather gloves to protect your hands from the heat when wiping the wax. If the wax becomes a little too hard to wipe off with a paper towel, heat up the wax melter and after the wax has melted into a liquid, turn off the power and wipe off the liquid wax with a paper towel.



(3). Alcohol wipe


If there is still any remaining wax residue, wipe down the inside of the furnace with rubbing alcohol after the pot has cooled. If you've used colored wax in the furnace, the alcohol may also help remove stubborn dye residue.






(4). Deodorizing

If the inside of the furnace still smells like the added fragrance you used in the last batch of candles, sprinkle the inside of the furnace with baking soda to freshen it up. Wet a scrubbing sponge and use the sponge to gently scrub the interior. Leave the wet baking soda residue in the pot for 30 minutes or so, rinse again and dry with paper towels.

5. MAINTENANCE

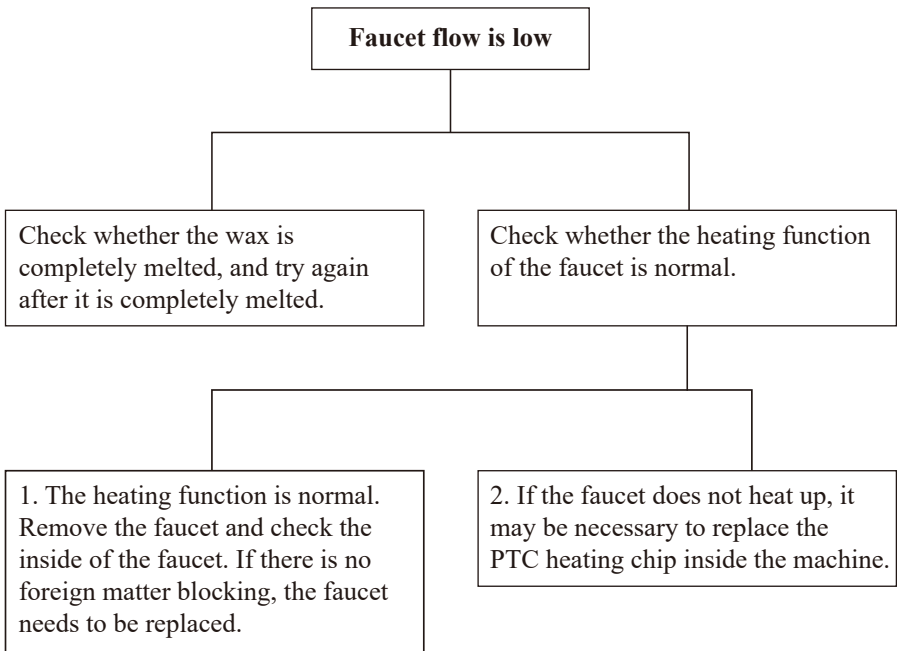

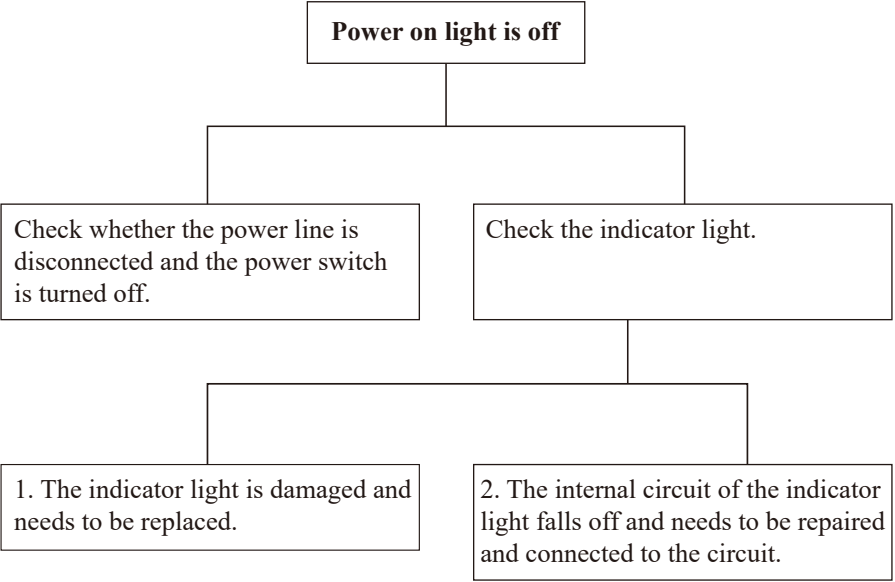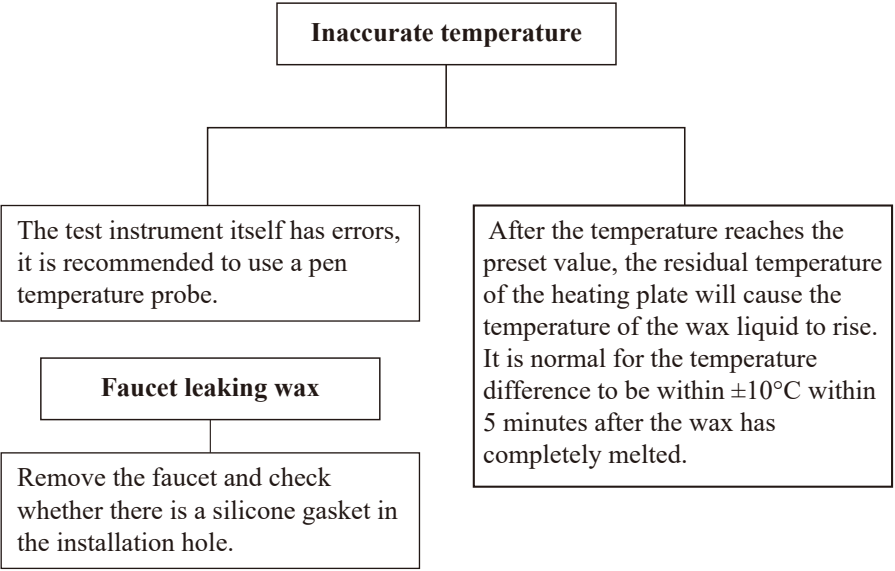

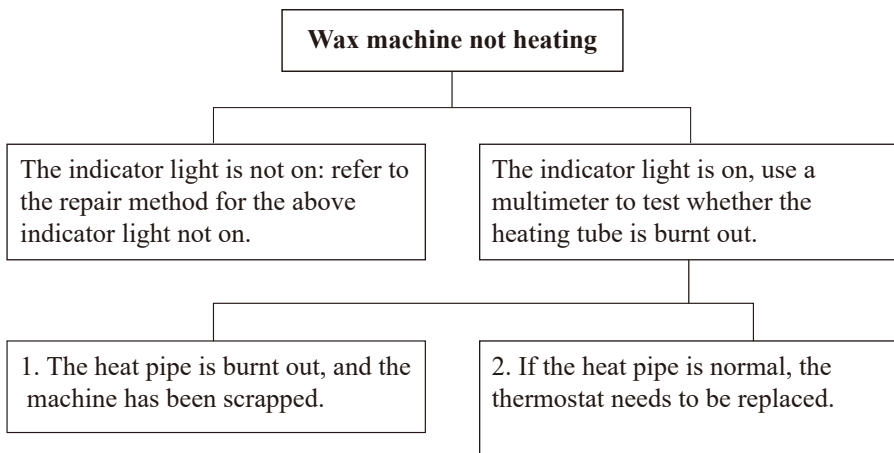

6. FAQ

Q: Can this machine be used for gel wax?

A: Depending on the melting point of the gel wax you use, gel wax with a melting point below 100°C can try to melt, and the higher the melting point, the slower the melting speed.

Q: How much soy wax can this machine hold?

A: Unmelted soy wax, filled with about 3.2KG (7 pounds).


Q: After the faucet has cooled, is it clogged with wax?

A: The internal pipeline of the machine has a built-in PTC heating device. Every time it is powered on, it will heat the pipeline with low power. If the faucet is blocked by wax, it can be solved after about fifteen minutes of heating.

7. DISCLAIMER

1. This product is not suitable for children.
2. The pictures of this product are all taken in kind. Due to the influence of light and angle during the shooting process, including the color difference of the display resolution, the products of distribution channels in different regions will be slightly different, and the products displayed in the mall shall prevail.
3. The manufacturer's packaging pattern will change without notice, and the store pictures will be updated as much as possible to ensure the latest product types.
4. The internal circuit of this product is disassembled without permission, and the components that are not of our company are replaced, resulting in product damage, and our company is not responsible for it.
5. For all products sold, the company first requires that on the premise of strictly using assembly and necessary technology, we are only responsible for the after-sales of the product (the purchased product itself) (when repaired or replaced) The manufacturer confirms that it is a quality problem, The company is not responsible for any other loss and injury.
6. As a compliant manufacturer, we design, manufacture and sell without any propaganda meaning of politics, military, religion, country, race or color. What manufacturers can do is to respect scientific, historical rules as much as possible. The purpose of the manufacturer is for the peace of mankind.
7. For other unresolved matters, it shall be implemented in accordance with relevant national laws and regulations!


ANLEITUNG ZUM WACHSSCHMELZOFEN

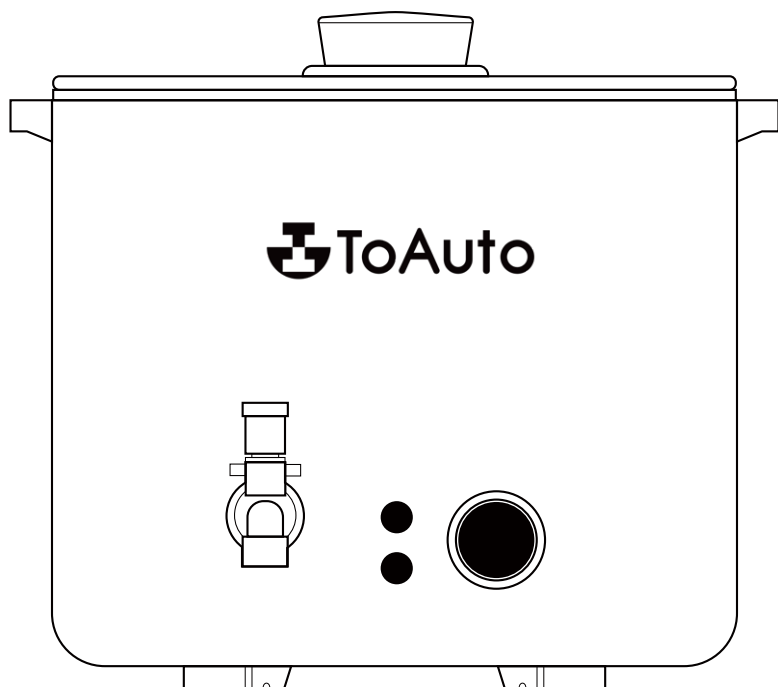

1. SICHERHEITSHINWEISE

1. Bei diesem Produkt handelt es sich um ein elektrisches Gerät, und es sollten Sicherheitsvorkehrungen getroffen werden um Unfälle zu vermeiden.
2. Um einen elektrischen Schlag zu vermeiden, muss das Gerät an eine geerdete Steckdose angeschlossen werden. geerdete Steckdose angeschlossen werden, und es muss die richtige Spannung gewählt werden, um eine korrekte Erdung. Das Gerät darf nicht dem Regen oder feuchten Umgebungen ausgesetzt werden. Wenn Sie das Gerät nicht benutzen, unterbrechen Sie bitte die Stromzufuhr. Nachdem das Gerät vollständig abgekühlt ist, kann es an einem geeigneten Ort gelagert werden.
3. Dieses Gerät ist nicht für die Verwendung durch Personen (einschließlich Kinder) mit körperlichen, sensorischen oder geistigen Beeinträchtigungen oder mangelnder Erfahrung und Kenntnis, es sei denn, sie werden von Personen, die für ihre Sicherheit verantwortlich sind, beaufsichtigt und unterwiesen.
4. Wenn das Netzkabel oder das Gerät beschädigt ist, muss es vom Hersteller oder einem Hersteller oder einer autorisierten Kundendienststelle ersetzt und repariert werden, um Gefahren zu vermeiden.
5. Es ist strengstens verboten, dieses Gerät in einer feuchten und korrosiven Umgebung zu verwenden, und nicht in einer brennbaren oder explosiven Umgebung zu verwenden. Nachdem das Nach dem Einschalten des Geräts muss sich jemand um das Gerät kümmern, um einen sicheren Betrieb zu gewährleisten.
6. Wenn Sie Teile des Geräts ersetzen, verwenden Sie bitte Originalzubehör.
7. Dieses Produkt entspricht den CE-, FCC-, ROHS- und anderen Zertifizierungen und hat ein und hat ein Industriepatent beantragt, und Fälschungen müssen untersucht werden.

2. ERSCHEINUNG

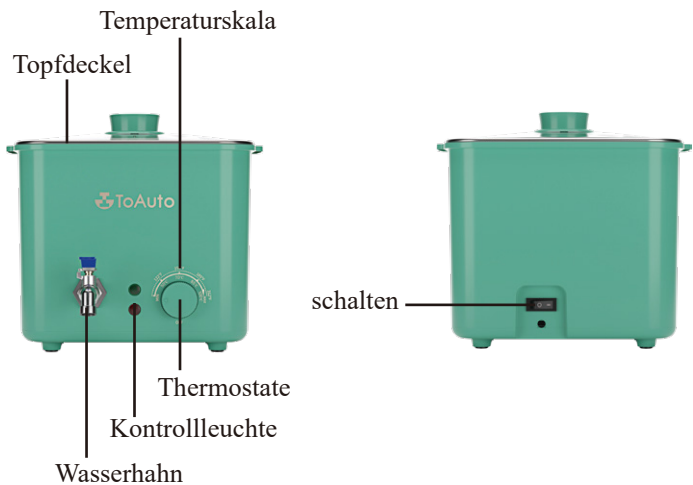

3. PARAMETER

Produktname	Wachsschmelzofen
Eingangsspannung (V)	AC 120V , 60HZ or AC230V , 50HZ
Nennleistung (W)	800W
Temperaturbereich	50-100°C
Kapazität	4L
Kontrollleuchte	Rotes Licht (Maschine im Heizstatus); grünes Licht (Maschine im Warmhaltestatus.)

4. BENUTZERHANDBUCH

4.1. Installation des Wasserhahns

Nachdem Sie den wasserdichten Ring am Wasserhahnrohr angebracht haben, richten Sie das Rohr aus und ziehen Sie es im Uhrzeigersinn fest. Benutzen Sie ggf. den passenden Schraubenschlüssel.




4.2. Sicherheitserinnerung


- (1). Dieses Gerät darf nur in Innenräumen verwendet werden. Vor dem Gebrauch sollte es auf einen horizontalen Tisch gestellt werden. Der Abstand zwischen dem Gerät und der Wand sollte mehr als 10 cm betragen.
- (2). Schließen Sie das Gerät an das Stromnetz an, die Steckdose muss eine zuverlässige Erdung haben. Schutz haben.
- (3). Legen Sie die Wachsbohnen in die Maschine, bevor Sie die Maschine starten, um ein Trockenbrennen der Maschine zu vermeiden. um ein trockenes Verbrennen des Geräts zu vermeiden; ein längeres trockenes Verbrennen des Geräts kann das Heizrohr durchbrennen.

4.3. Parametereinstellungen

- (1). Schalten Sie den Netzschalter auf der Rückseite des Geräts ein, die Anzeige leuchtet auf, und das Gerät startet.

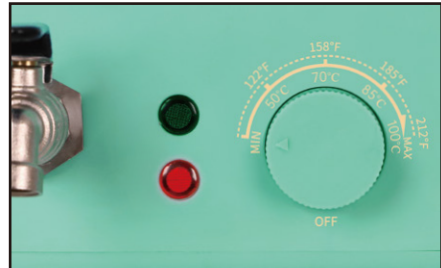


(2). Nach dem Einschalten stellen Sie den Temperaturwert mit dem Drehknopf ein.

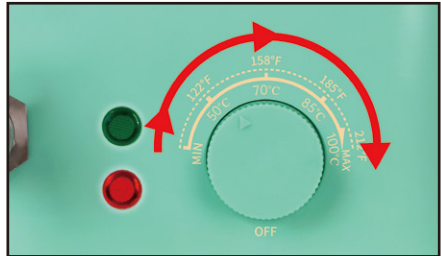

(3). Aufgrund des Einflusses des Gewichts des zugegebenen Wachsbohnenmaterials und der Umgebungstemperatur beträgt die Temperaturdifferenz zwischen der Echtzeittemperatur und der die Temperaturdifferenz zwischen der Echtzeittemperatur und der eingestellten Temperatur etwa $\pm 10^{\circ}\text{C}/50^{\circ}\text{F}$.

4.4. Schritte zur Herstellung von Kerzen

(1). Fügen Sie Wachsbohnen hinzu, starten Sie das Gerät, stellen Sie die Temperatur ein und beginnen Sie mit dem Schmelzen des Waxes.

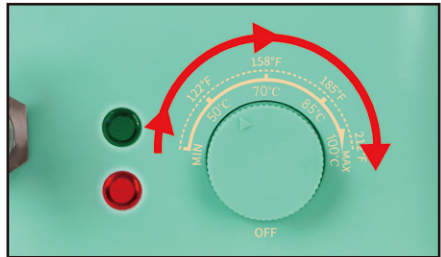

(2). Während des Erhitzungsprozesses empfiehlt es sich, die Wachsbohnen im Topf alle 3-4 Minuten mit einem Löffel umzurühren, um die Temperatur im Topf gleichmäßiger zu machen und das Wachs schneller zu schmelzen.



(3). Nach etwa 15 Minuten sind die Wachsböhen vollständig geschmolzen; bereiten Sie den Wachsbehälter vor, den Wasserhahn öffnen, um die Wachsflüssigkeit einzufüllen.



(4). Bereiten Sie eine Form mit einem Docht vor, gießen Sie die Wachsflüssigkeit langsam in die Form und lassen Sie sie 24 Stunden ruhen lassen (die Ruhezeit hängt von der Umgebung, der Temperatur und der Wachsart, etc.).



4.5. Ergänzende Anmerkung

(1). Wenn Sie die Kerzen duftender machen wollen, können Sie versuchen, einige Aromatherapie oder ätherische Öle, wie ätherisches Lavendelöl, ätherisches Rosenöl, ätherisches Zitronenöl, ätherisches Rosmarinöl usw. hinzufügen, es wird Ihnen gefallen.



(2). Wenn Sie farbige Kerzen herstellen möchten, können Sie Ihre Lieblingsfarben oder getrocknete Blumen hinzufügen. Blumen hinzufügen und die Form nach 24 Stunden entfernen (Hinweis: Da das Wachs noch nicht vollständig trocken ist, wenden Sie bitte nicht zu viel Kraft beim Entfernen der Form an).



4.6. Reinigungsmaschine

Das Schmelzen des Waxes zur Herstellung der Kerzen ist nur ein Teil des Projekts. Wenn du vorhast Kerzen herstellen oder den Ofen wiederverwenden möchten, müssen Sie zunächst das alte Wachs entfernen. Scharfe Werkzeuge oder Scheuerschwämme sind nicht wirklich eine Option, wenn du deine Pfannen in gutem Zustand erhalten wollen. Gießen Sie stattdessen überschüssiges Wachs ab und wischen Sie das Wachs ab, solange es noch weich ist und für die nächste Verwendung noch warm ist.

(1). Wachsabfälle vermeiden

Wenn Sie mit der Herstellung einer Kerze - oder einer anderen Wachsarbeit - fertig sind, ist es gut möglich, dass die Wahrscheinlichkeit groß ist, dass Sie noch eine Menge Wachs im Ofen haben. Wenn Sie es zum Aushärten in der Pfanne lassen aushärten zu lassen, wird es schwieriger zu entfernen, was ein Problem sein könnte, wenn Sie einen anderen Duft, eine andere Farbe oder eine andere Art von Wachs verwenden möchten. Gießen Sie das restliche flüssige Wachs in die Papierförmchen und lassen Sie sie vollständig aushärten. Wenn Sie das Wachs später wiederverwenden möchten, ziehen Sie einfach Papier abziehen und den Wachsblock wieder in den Ofen stellen. Wenn Sie das Wachs wegwerfen möchten, entsorgen Sie es in einen Pappbecher oder einen leeren, nicht wiederverwertbaren Behälter, z. B. eine Karton. Sobald das Wachs aushärtet, kann es entsorgt werden.

(2). Überschüssiges Wachs entfernen

Auch nach dem Abgießen des restlichen Waxes kann noch eine dünne Wachslache auf dem Boden auf dem Boden oder im Inneren des Ofens. Sobald das Wachs leicht abgekühlt, aber noch flüssig ist noch flüssig ist, ein Papiertuch zusammenrollen und damit die Innenseite der Pfanne abwischen. Papierhandtuch ersetzen, wenn es mit Wachs gesättigt ist. Tragen Sie dicke Lederhandschuhe, um um Ihre Hände beim Wischen des Waxes vor der Hitze zu schützen. Wenn das Wachs ein wenig zu hart wird, um es mit einem Papiertuch abzuwischen, erhitzen Sie den Wachsschmelzer und schalten Sie, nachdem das Wachs Nachdem das Wachs zu einer Flüssigkeit geschmolzen ist, schalten Sie das Gerät aus und wischen das flüssige Wachs mit einem Papiertuch ab. Papierhandtuch ab.



(3). Alkoholtupfer


Sollten noch Wachsreste vorhanden sein, wischen Sie das Innere des Ofens nach dem Abkühlen mit Reinigungsalkohol ab, nachdem der Topf abgekühlt ist. Wenn Sie farbiges Wachs im Ofen verwendet haben, kann der Alkohol auch helfen, hartnäckige Farbstoffreste zu entfernen.






(4). Desodorierend

Wenn das Innere des Ofens immer noch nach dem Duft riecht, den Sie bei der letzten Kerzen verwendet haben, bestreuen Sie das Innere des Ofens mit Backpulver, um es aufzufrischen. Befeuchten Sie einen Scheuerschwamm und schrubben Sie das Innere des Ofens damit vorsichtig ab. Lassen Sie die nassen Natronreste etwa 30 Minuten im Topf, spülen Sie sie erneut aus und trocknen Sie sie mit Papiertüchern.

5. WARTUNG

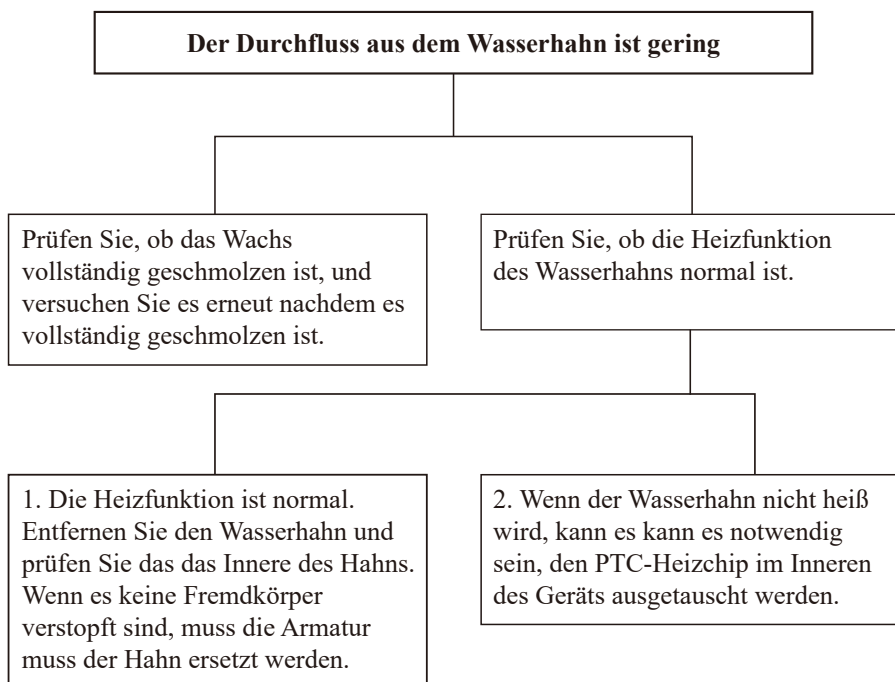

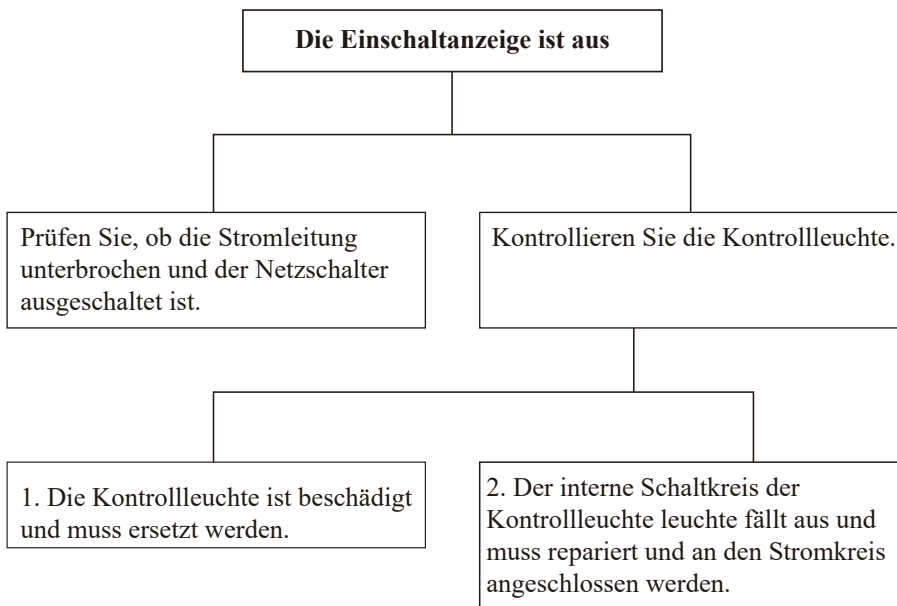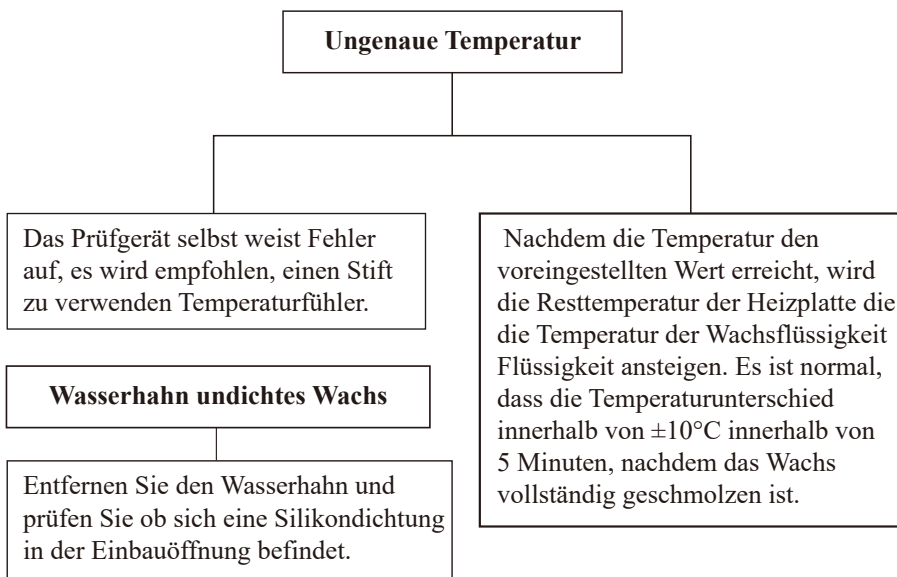

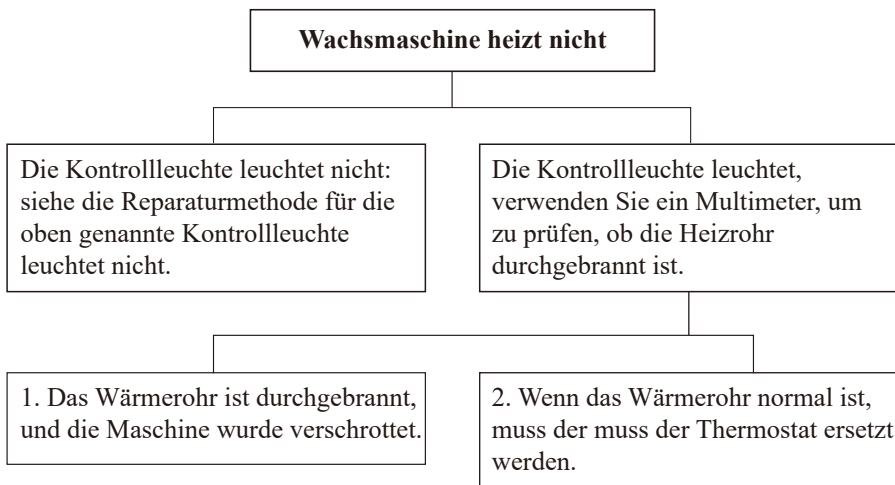

6. FAQ

F: Kann dieses Gerät für Gelwachs verwendet werden?

A: Je nach Schmelzpunkt des von Ihnen verwendeten Gelwachs kann Gelwachs mit einem Schmelzpunkt unter 100°C kann versuchen zu schmelzen, und je höher der Schmelzpunkt, desto langsamer ist die Schmelzgeschwindigkeit.

F: Wie viel Sojawachs kann dieses Gerät aufnehmen?

A: Ungeschmolzenes Sojawachs, gefüllt mit etwa 3,2 kg (7 Pfund).

F: Ist der Wasserhahn nach dem Abkühlen mit Wachs verstopft?

A: Die interne Rohrleitung des Geräts hat eine eingebaute PTC-Heizvorrichtung. Jedes Mal, wenn das Gerät eingeschaltet wird, heizt es die Rohrleitung mit geringer Leistung auf. Wenn der Wasserhahn durch Wachs verstopft ist, kann dies nach etwa fünfzehn Minuten Erwärmung behoben werden.

7. HAFTUNGSAUSSCHLUSS

1. Dieses Produkt ist nicht für Kinder geeignet.
2. Die Bilder von diesem Produkt sind alle in der Art genommen. Aufgrund des Einflusses von Licht und Winkel während der Aufnahme, einschließlich des Farbunterschieds der Auflösung, werden die Produkte der Vertriebskanäle in verschiedenen Regionen leicht unterschiedlich sein und die im Einkaufszentrum gezeigten Produkte sind maßgebend.
3. Das Verpackungsmuster des Herstellers kann sich ohne Vorankündigung ändern, und die Bilder werden so weit wie möglich aktualisiert, um die neuesten Produkttypen zu gewährleisten.
4. Der interne Schaltkreis dieses Produkts wird ohne Erlaubnis demontiert, und die Komponenten, die nicht von unserer Firma sind, werden ersetzt, was zu Produktschäden führt, und unsere Firma ist dafür nicht verantwortlich.
5. Für alle verkauften Produkte verlangt das Unternehmen zunächst, dass unter der Prämisse der strikten Montage und der notwendigen Technologie, sind wir nur verantwortlich für den After-Sales des Produkts (des gekauften Produkts selbst) verantwortlich sind (wenn es repariert oder ersetzt wird). Hersteller bestätigt, dass es sich um ein Qualitätsproblem handelt, das Unternehmen ist nicht verantwortlich für andere Verluste und Verletzungen.
6. Als konformer Hersteller, entwerfen, produzieren und verkaufen wir ohne jegliche Propaganda im Sinne von Politik, Militär, Religion, Land, Rasse oder Farbe. Was Hersteller tun können, ist die wissenschaftlichen, historischen Regeln so weit wie möglich zu respektieren. Der Zweck des Herstellers ist für den Frieden der Menschheit.
7. Bei anderen ungelösten Fragen wird sie im Einklang mit den einschlägigen nationalen Gesetzen und Vorschriften durchgeführt!

SPECIFICAYION

Product name	Wax Melting Furnace
Model	WMF-4L
Capacity	4L
Trade mark	TOAUTO
Rated Voltage	AC 120V; 60HZ (The United States)
	AC 230V; 50HZ (United Kingdom/Germany)
Bucket Material	Stainless Steel
Rated power	800W
Temperature range	50°C-100°C(122°F-212°F)

Retailer's Information

Retailer	FAST TO BUY LIMITED
Retailer Address	HK,WANCHAI,RM 1801 EASEY COMM BLDG,253-261 HENNESSY ROAD
E-Mail	service@fasttobuy.com
Zip code	999077
Tel	+86-18124033761

Manufacturer's Information

Manufacturer	Shenzhen Fast To Buy Commerce CO., Ltd.
Address	501(5037), Workshop 01, Xintianxia Industrial City, Wankecheng Community Bantian Steet, Longgang District, Shenzhen,China
Zip code	518000
E-Mail	service@fasttobuy.com
Tel	+86-755-82550561

UK importer's full information

UK REP UK CA	
Country: United Kingdom	Business Name: JunBright Ltd
Rektor: Zhenhui Liang	Address: 51 Chalton Street
City: London	Zip code: NW1 1HY
Tel: +4407561533298	E-mail: yldyx112@outlook.com

WEEE-DISPOSAL :

The product complies with the requirements of the Waste Electrical and Electronic Equipment (WEEE) Directive and strictly complies with the relevant regulations.



Warranty Terms:

- 1.The table for feedback from customers should be returned to our company within a month after the date of purchase.In this way,customers may enjoy one-month repair warranty.
- 2.Repair Warranty and Purchase Certificate should be presented.The warranty only applies when all the required documents are available.
- 3.The warranty does not apply when the equipment has received damage through abuse,carelessness,improper installation,accident or mishandling during shipment,connecting to improper line voltage,or has been serviced by anyone other than an authorized factory representative.
- 4.After the warranty period,we are ready to provide charged repair service,perfect as always.

Dear Sir / Madam:

Thank you for purchasing our products.' To improve our service and ensure the proper use of our products,please kindly write down your suggestions.

Name of Product: _____

Date of Purchase: _____

Your Suggestions: _____

Package: _____

Functions: _____

Others: _____

Date : _____

GUARANTEE CARD

The product conforms to the technical standards

QC. _____

Manufacture Date _____

Fast To Buy Limited

GUARANTEE CARD

The warranty is valid in one year since the purchase of this ,any quality problem found,please send back to us with courier fee to be collected,upon receipt of the returning unit,we will repair it and send back to customer within two working days.

Notice:Please enclose the warranty card along with the returning product, or else we have the right to reject the repairing,thanks for your corporation.



Customer Service



Instruction Videos

FAST TO BUY LIMITED

Address: RM1801, EASEY COMM BLDG, 253-261 HENNESSY
ROAD WANCHAI 999077, HONG KONG

Web: www.fasttobuy.com

Tel: +86-13312993740

Email: service@fasttobuy.com

Facebook: <https://www.facebook.com/servicefasttobuy>



EXCLUSIVE MEMBERSHIP



Member Day Surprise



6 Month Extra Warranty



3 Month Extra Return



New Sample Experience



1x1 Online Service



Most Valuable Client